
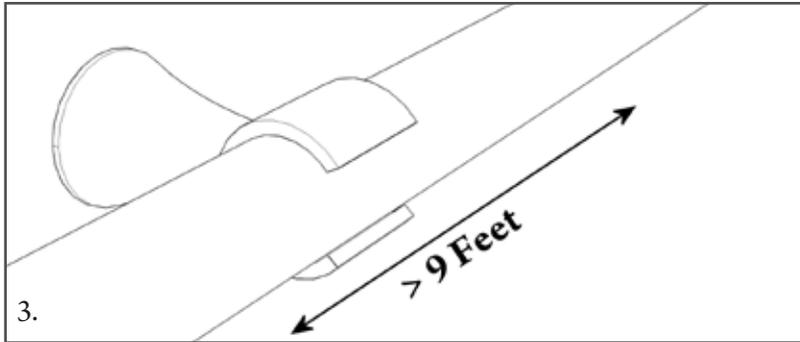
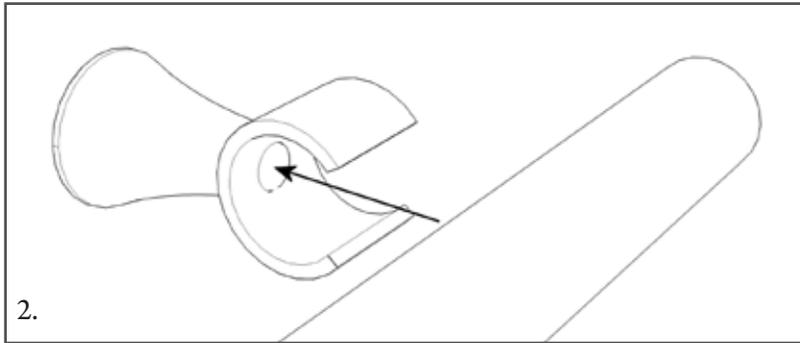


MOOREA by

PATIO
LANE

Outdoor Drapery Hardware

Horizontal Mount

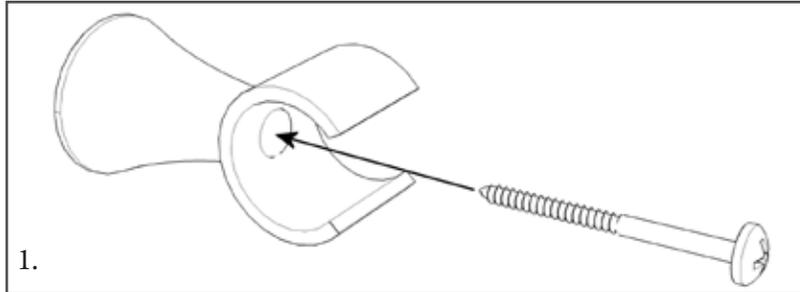


1 - Attach brackets to surface with 3 inch screw using appropriate type (drywall, wood, metal, concrete, etc.)

2 - After brackets are installed, snap rod into the mount.






3 - We recommend using a center support on rods exceeding 9 feet.

Splice Connector (optional)

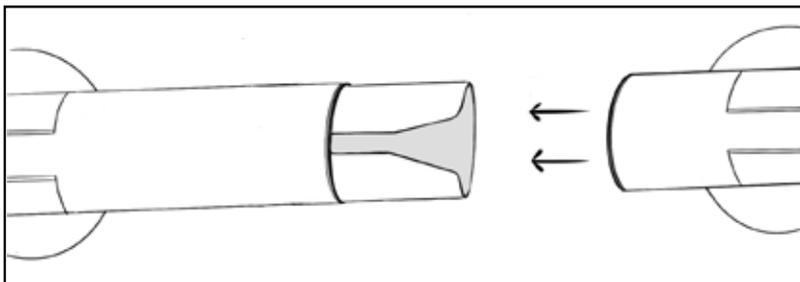

1 - Rod Splice/Connector should be inserted halfway into first rod, then insert remaining into the second rod.

Vertical Mount

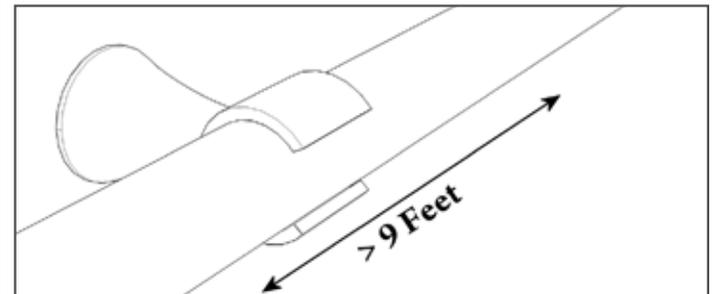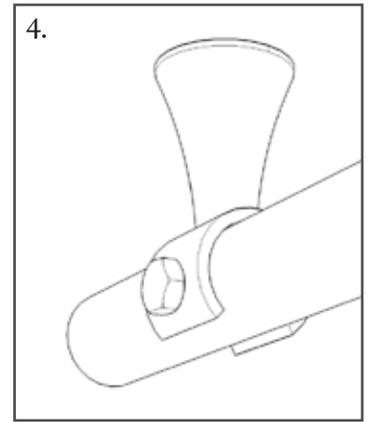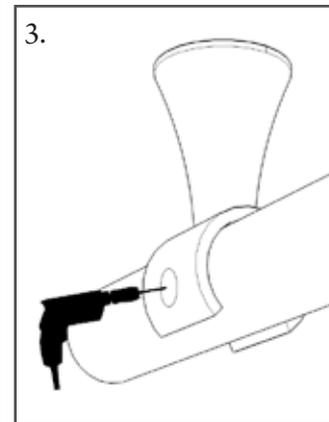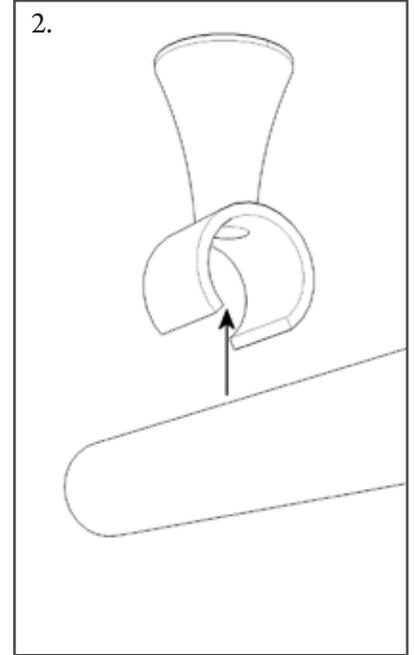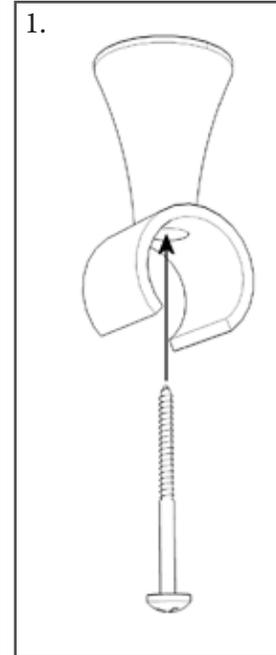

1 - Attach brackets to surface with 3 inch screw using appropriate type (drywall, wood, metal, concrete, etc.)

2 - After brackets are installed, snap rod into the mount.

3 - Drill hole through bracket and rod.

4 - Install bolt and nut to secure rod.

5 - We recommend using a center support on rods exceeding 9 feet.